

## PLEASE READ THIS FIRST

### CN1074 & CN1074A Bell47G II Detail Manual Updates

#### Step 12

The direction of the landing gear mounts are backwards in the original instructions, when attaching the horizontal straight struts to the plastic vertical struts, make sure that the mounting tabs are pointing inwards. Opposite to what is shown in the photo.

#### Step 14

The photo showing the landing gear mounted to the mechanics is backwards, see Step 12 and replace the original four self tapping screws with M3x12 self tapping screws.

#### Step 18

Two M2x8 are provided as they are missing from the hardware for this step.

---

## PLEASE READ THIS FIRST

### CN1074 & CN1074A Bell47G II Detail Manual Updates

#### Step 12

The direction of the landing gear mounts are backwards in the original instructions, when attaching the horizontal straight struts to the plastic vertical struts, make sure that the mounting tabs are pointing inwards. Opposite to what is shown in the photo.

#### Step 14

The photo showing the landing gear mounted to the mechanics is backwards, see Step 12 and replace the original four self tapping screws with M3x12 self tapping screws.

#### Step 18

Two M2x8 are provided as they are missing from the hardware for this step.

---

## PLEASE READ THIS FIRST

### CN1074 & CN1074A Bell47G II Detail Manual Updates

#### Step 12

The direction of the landing gear mounts are backwards in the original instructions, when attaching the horizontal straight struts to the plastic vertical struts, make sure that the mounting tabs are pointing inwards. Opposite to what is shown in the photo.

#### Step 14

The photo showing the landing gear mounted to the mechanics is backwards, see Step 12 and replace the original four self tapping screws with M3x12 self tapping screws.

#### Step 18

Two M2x8 are provided as they are missing from the hardware for this step.