
Table of Contents

Table of Contents	2
Introduction	3
Required Items for Assembly	4
Building Guide	5-6
Main Rotor Head Block & Seesaw	Sub Assembly 1 Main Rotor Head
Bell Mixers, Main Rotor Grips & Feathering Shaft	Step 1-1, 1-2..... 7
Washout Assembly & Swashplate	Step 1-3, 1-4..... 8
	Step 1-5, 1-6..... 9
Start Shaft Assembly	Sub Assembly 2 Main Gear Train
Tail Transmission Output Shaft & Counter Gear	Step 2-1, 2-2..... 10
Main Gear, Main Shaft & Elevator Bellcrank	Step 2-3, 2-4..... 11
	Step 2-5, 2-6..... 12
Upper Side Frames	Sub Assembly 3 Main Mechanics
Upper Frame Assembly	Step 3-1..... 13
Collective & Aileron Levers	Step 3-2..... 14
	Step 3-3..... 15
Tail Input Shaft, Tail Pitch Plate & Tail Output Shaft	Sub Assembly 4 Tailboom
Tail Rotor Output Assembly	Step 4-1, 4-2, 4-3..... 16
Tail Rotor Grips & Tail Pitch Lever	Step 4-4, 4-5..... 17
Tail Guides, Drive Shaft & Tail Gearbox	Step 4-6, 4-7..... 18
	Step 4-8, 4-9..... 19
ARF Scale Mechanics Introduction	Page..... 20
Flybar, Paddles and Flybar Control Arms	Step 1-7..... 20
Clutch, Clutch Bell, Fan, Shroud & Engine Mount	Step 3-4, 3-5..... 21
Fuel Tank & Landing Gear	Step 3-6, 3-7..... 22
Lower Frame Assembly	Step 3-8..... 23
Servo Frames & Main Mechanic	Step 3-9, 3-10..... 24
Final Rotor Head Assembly & Scale Muffler	Final Assembly
Tail Pushrod Guides & Tail Boom	Step 5-1, 5-2..... 25
	Step 5-3, 5-4..... 26
Pushrod Setup	Setup and Configuration
Servo Information Page	Step 6-1..... 27
Rotor Head and Lower Mechanics Linkage Overview	Page..... 28
Aileron & Collective Setup	Step 6-2, 6-3..... 29
Elevator Setup	Step 6-4..... 30
Rudder Setup	Step 6-5..... 31
Throttle Setup and Main Rotor Blades	Step 6-6..... 32
Radio Components & Balancing	Step 6-7, 6-8..... 33
Gyro Setup & Installation	34
Final Radio Setup & Blade Pitch Setup	35
Throttle and Tail Rotor Adjustments	36-37
Before Flying, Engine Starting and Exhaust Issues	38
Replacement Part List	39-41
Optional Parts	42
	43-44
