


STEP 24 Servo Frame Assembly

From parts bag 5: Assemble the servo tray using eight M3x16 Self Tapping Screws. This is a good time to install the collective and throttle servos (note orientation) from the *inside* of the left servo frame. (**Note, use the rubber grommets provided with the servos, you can use the screws that came with your servos or the screws provided in the kit**). Attach the rudder (yaw), aileron (roll cyclic) and elevator (fore/aft cyclic) servos insuring proper orientation, to the top servo tray. Attach the canopy mount using two M3x30 Phillips Machine Screws through the top of the lower servo tray, through the plastic spacer and into the canopy mount.

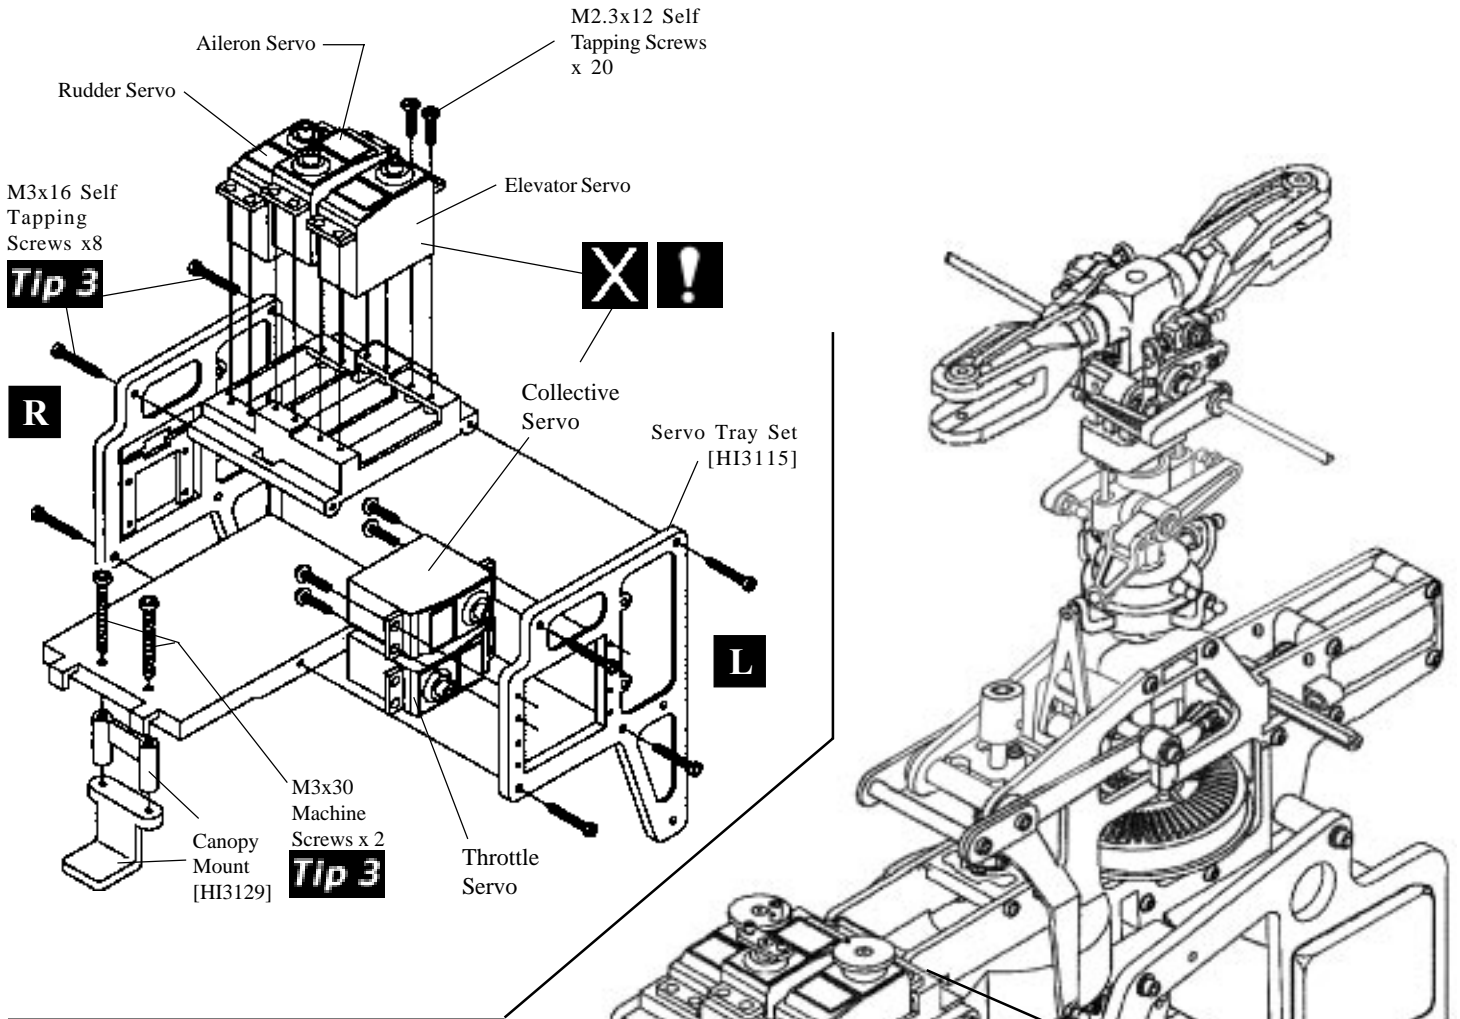

STEP 25 Main Mechanics

Attach the servo tray assembly to the mechanics using four M3x10 Self Tapping Screws, two M3x20 Socket Cap Screws and two M3 Washers. The two Locknuts for the cap screws are inserted into the recess inside the bottom of the fan shroud .

