
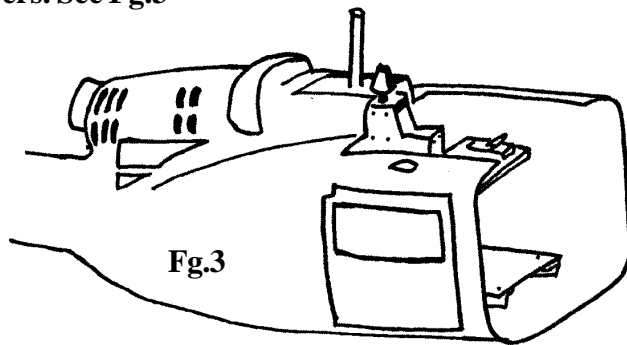
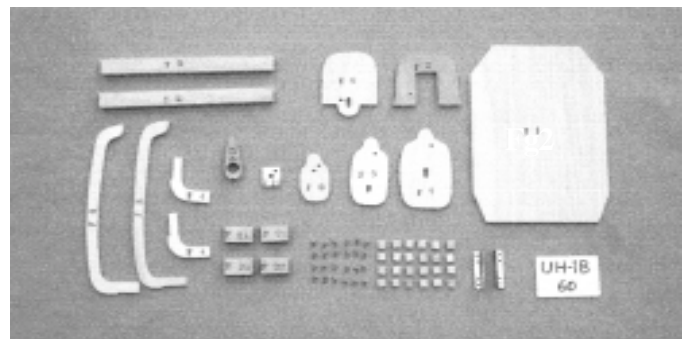



# Century UH-1B Huey Cobra Body Instruction Manual

Thank You For Purchasing The Century Top Quality Scale UH-1B Huey Cobra Fuselage Kit!


1. Please check all the Fiber glass parts as in picture:  
Main body, Front nose, Tail boom, Top cap & Horizontal Fin. See Fg1
2. Check all the wood parts and all the hardware shown in the picture. Fg2
3. Temporarily fit the mechanics into the main fuselage body with F1 bottom plywood plate and F2 hardwood bearers. See Fg.3

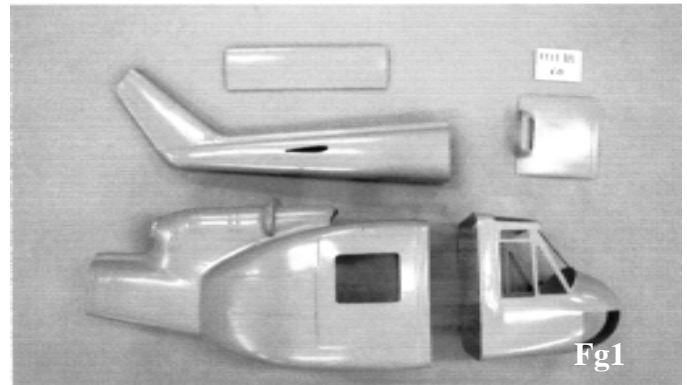

4. Bend the brass tube to shape. When satisfied, then cut the tube to the exact length. fit the tube into the wood mounts(F6,F7, F8, F9 & 10). See Fg4

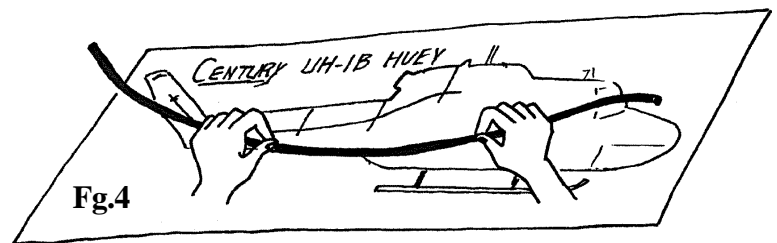

5. Epoxy the formers in together with the brass tube and the rudder control rod already secured with epoxy in the exact location. (Note: This step is important, otherwise the brass tube will not be able to secure at F8 after it is installed in the fuselage tail boom). See Fg.5

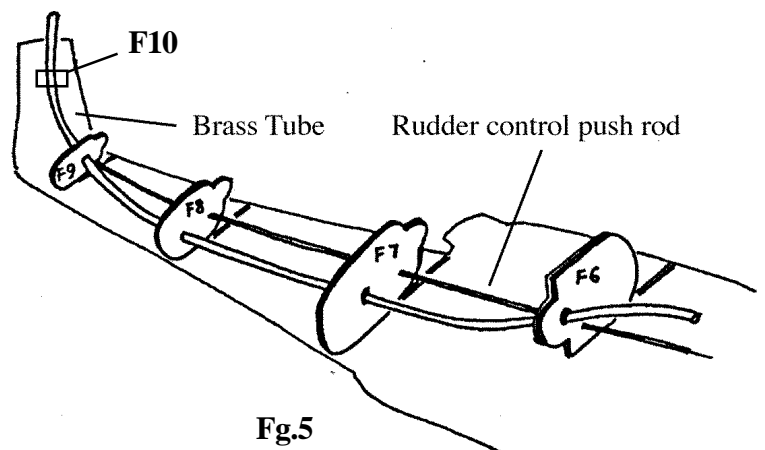

**Century Helicopter Products**  
**521 Sinclair Frontage Rd.**  
**Milpitas CA 95035 USA**  
**<http://www.centuryheli.com>**