


## STEP 44-45 Canopy & Decals

**Step 44** The Canopy has a line molded into the plastic to follow when trimming the windshield part out, be careful, trim the innermost line leaving the 6mm band for attaching the windshield. Using a sharp hobby knife carefully scribe a line several times into the plastic until you cut through the material. Similarly trim the clear windshield along the provided line, to make it easier to see the line, use a non-permanent marker and trace the line, any extra ink can be removed with rubbing alcohol. Test fit the canopy together by taping it to the canopy, some additional trimming maybe necessary to get a good fit. From Bag 5, the inside canopy mount can be installed ( **note the direction of the mount** ) with two 3x6mm Self Tapping Screws,( **note: the location for the mount has to be moved 8mm forward of the marked location on the bottom of the canopy** ). The clear windshield can be attached using six 2x6mm Self Tapping Screws in Bag 4, drill six 1mm holes at the locations shown.

To improve the adhesion of the decals to the body, peel the decal off the backing and apply one coat of spray adhesive (spray glue) to the sticky side, commonly found in your hobbyshop. For those who would prefer to paint the canopy, we offer a complete line of colors that will bond to the plastic.

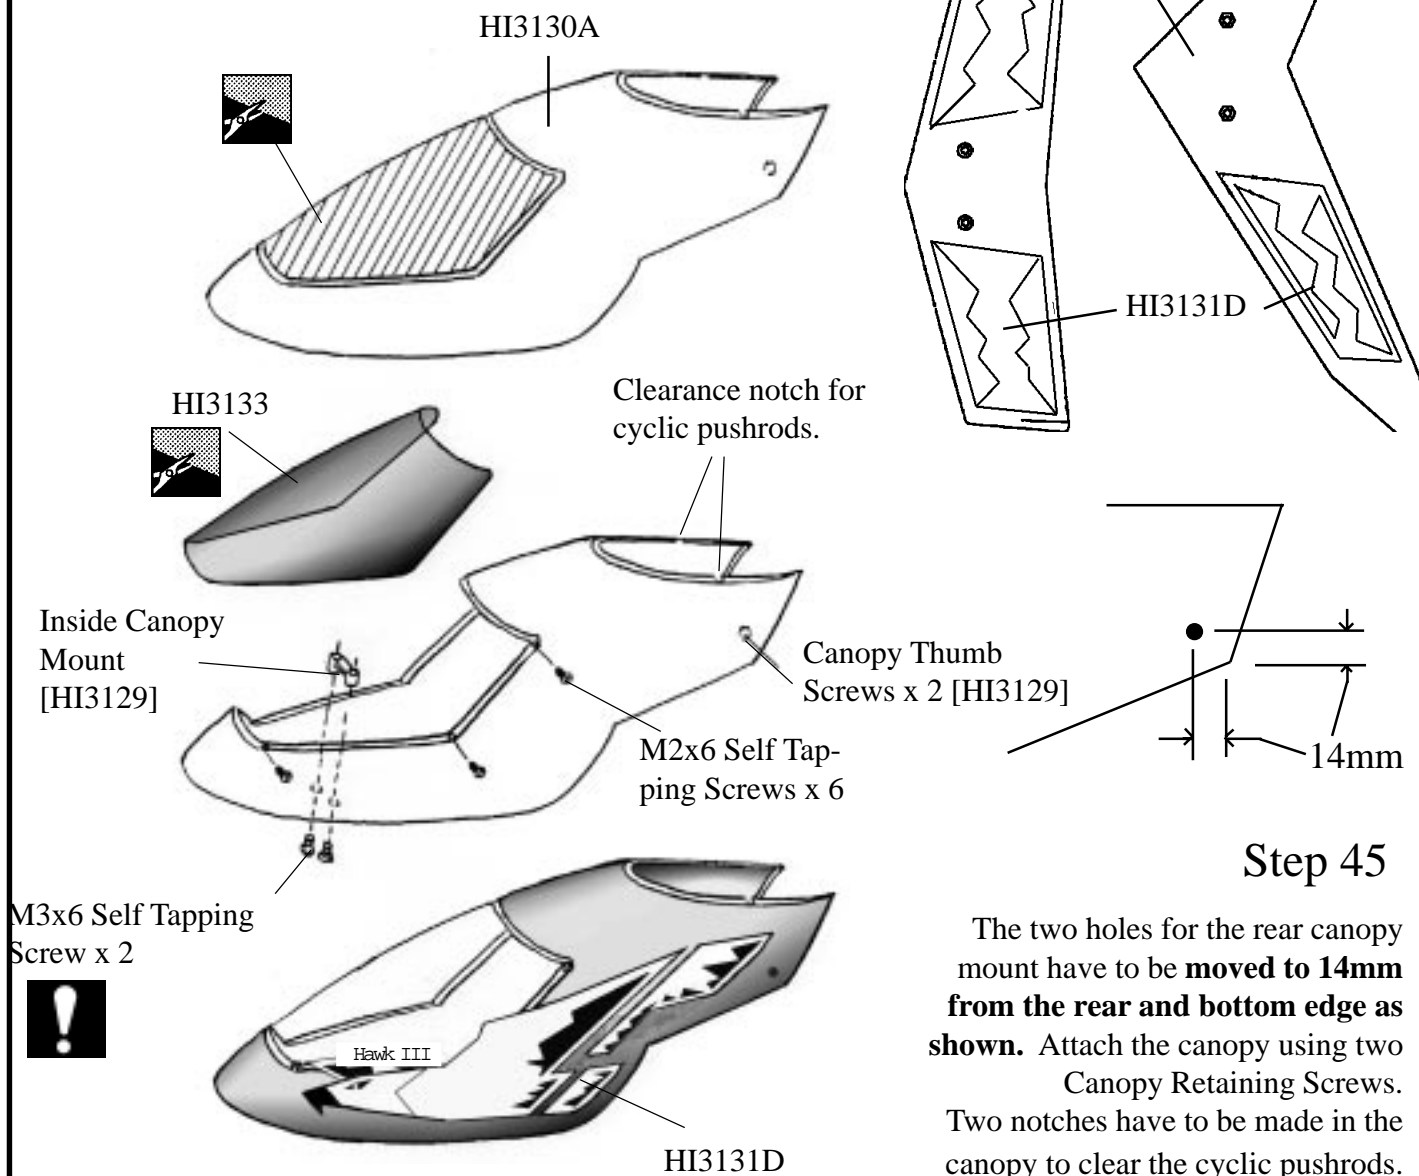

### Step 45

The two holes for the rear canopy mount have to be **moved to 14mm from the rear and bottom edge as shown**. Attach the canopy using two Canopy Retaining Screws. Two notches have to be made in the canopy to clear the cyclic pushrods.