
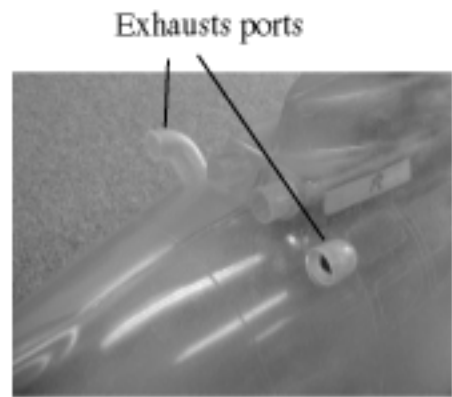


Step 6 Install FRP exhaust ports by using an adhesive on the inside of the fuselage to secure the exhaust. Next, using adhesive, place and space the 8 small wooden blocks inside the canopy mounting area.

These will be used to secure the canopy. Suggestion, temporarily place the canopy on the fuselage and secure with scotch tape. After aligning, mark the inside of the fuselage, with an erasable marker, where you want the blocks to be located. After marking, you can remove the tape.

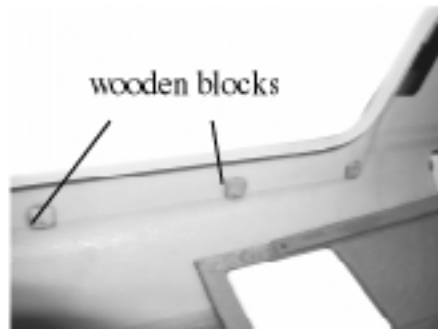

Step 7 Temporarily install the wood mount onto the main frame and temporarily install your mechanics. After you are satisfied with the alignment (main shaft centered with fuselage opening) you may want to use an adhesive to permanently attach the wood frame to the fuselage. At this point, you may want to paint the fuselage prior to reinstalling mechanics. From the package, remove the 2 aluminum strips. You may want to temporarily screw the strips to the left and right side of the mechanics (see photo below). Make Z bends and the flat section should be attached to and against the fuselage (see photo in step 10). After you are satisfied with the angles, attach the strips to the fuselage using adhesive.

NOTE: Prior to installing the mechanics, all links and servos, battery and gyro should have been properly installed.

