


### Step 8 Install horizontal tail fins

Attach the fins to the tail boom and check for fitness. Use an adhesive on the inside of the horizontal fin and slide into place. It is not recommend to put the adhesive on the protruding fin attachment of the fuselage as this will cause the adhesive to side out and around the outside area of the horizontal tail fin.

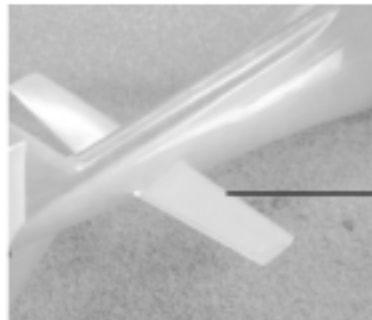

Horizontal tail fin

\*Pre-painted bodies require sanding and cleaning off the surface paint of the protruding fin attachment of the fuselage.




### Step 9 Front body/canopy installation

You can use scotch tape to temporarily hold the canopy area to the main fuselage for alignment. Note where you have attached the wood blocks for alignment. Drill small holes throught the fuselage and through the wood blocks. You are now able to secure the front canopy/body to the main fuselage. At the bottom of the nose is a notch enabling the nose to slide through the nose gear for alignment. Remember to install your mechanics for final installation.



### Step 10 Windshield Installation

The windshield in the kit version comes molded with a scribe line around the outside of the each windshield half. Using a black erasable marker, trace the line and cut out both sides. For painting, tape off all areas except the outside 1/4" and match the color planned for the front section. Tape off the back side before painting. After painting, attach the windshield to the canopy using an adhesive around the frame.

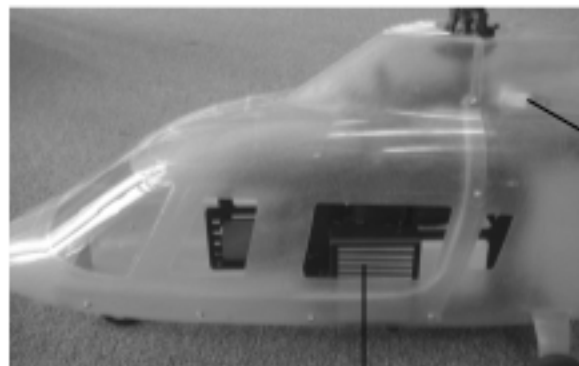

Z Bends



CN2058 Scale Muffler