


Step 47 Canopy & Decals

The Canopy has a line molded into the plastic to follow when trimming the windshield part out, be careful, trim the innermost line leaving the 6mm band for attaching the windshield. Using a sharp hobby knife carefully scribe a line several times into the plastic until you cut through the material. Similarly trim the clear windshield along the provided line, to make it easier to see the line, use a non-permanent marker and trace the line, any extra ink can be removed with rubbing alcohol. Test fit the windshield by taping it to the canopy. Some additional trimming may be necessary to get a good neat fit. From Bag 5, the inside canopy mount can be installed (**note the direction of the mount, the flaring faces the rear**) with two 3x6mm Self Tapping Screws approximately 134mm from the bottom rear. The clear windshield can be attached using six 2x6mm Self Tapping Screws in Bag 4, drill six 1mm holes at the locations shown.

Step 47 Canopy Mounts

The canopy should be test fitted before the two holes for the rear canopy mount are marked and drilled. Insure the canopy and windshield clears all control rods, radio gear and muffler. Then mark and drill the location of the rear mounting holes and insert the two rubber grommets.

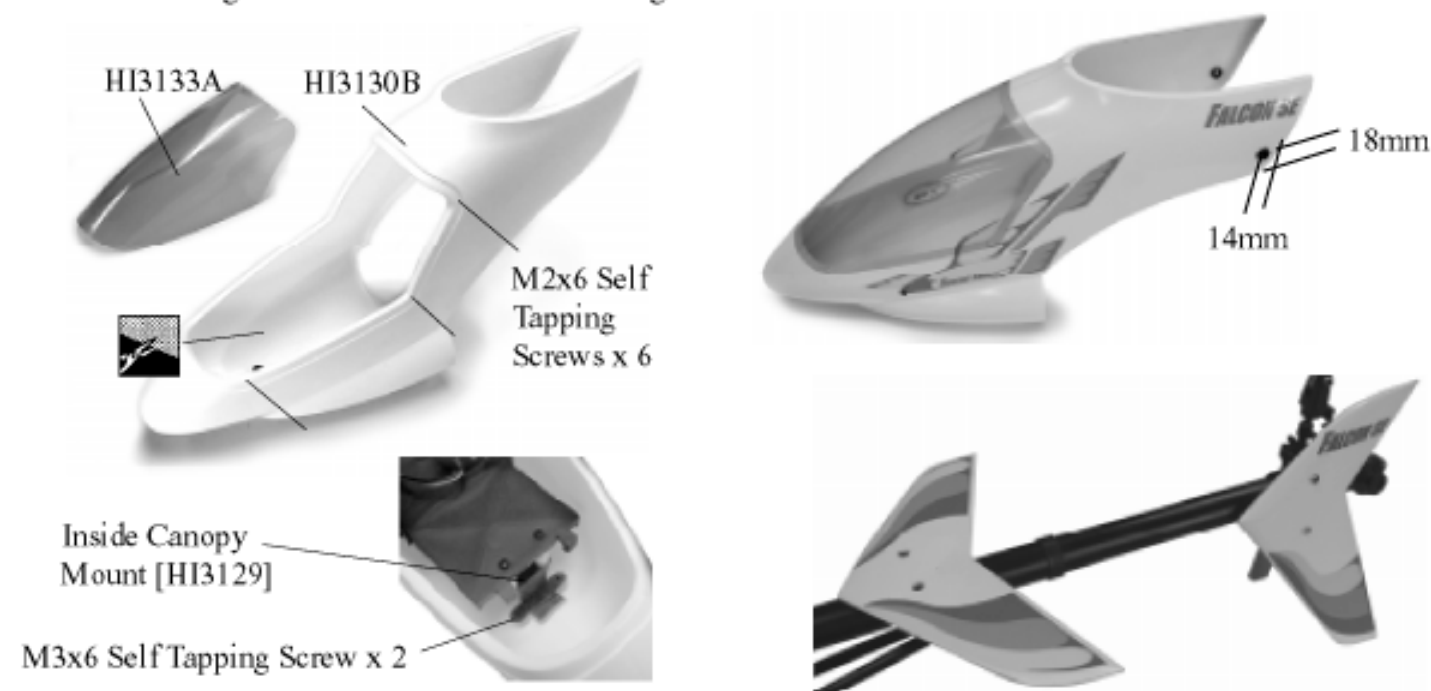

To improve the adhesion of the decals to the body, peel the decal off the backing and apply one coat of spray adhesive (spray glue) to the sticky side, commonly found in your hobbyshop. For those who would prefer to paint the canopy.

Raven 30/50 decal [HI3131J]

