


## Step 26 Landing Gear Assembly

From parts bag 6, assemble the landing gear by attaching the Aluminum Skids through the Struts, securing them with four 3x5mm Set Screws. Set the distance from the rear of the skid to the strut at 35mm. Attach the landing gear to the main mechanics using four 3x16mm(30) or 3x20mm(50) Machine Screws inserted from the bottom of the struts and through the M3x9 plastic spacers into the lower side frames and secure with four M3 locknuts.

**Tip** When routing the antenna wire from your receiver, insert the wire through the plastic guide tube and attach to the vertical fin using an elastic tied between the end of the antenna wire and the fin.

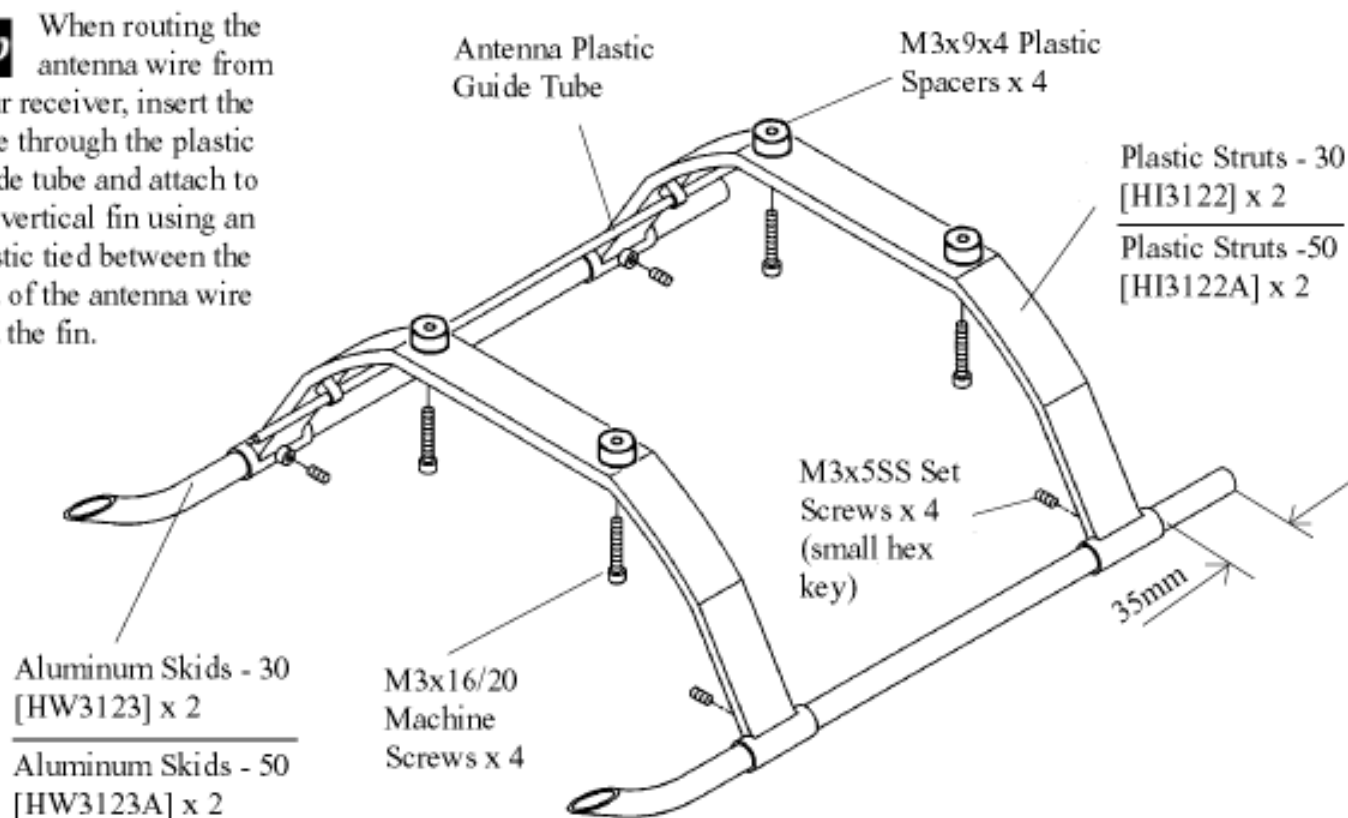

## Step 27 Tail Output Shaft Assembly

From parts bag 7, notice that the Tail Rotor Drive Shaft has 2 holes, one through the shaft and one drilled partially into the shaft. Slide the **small** Bevel Gear with the teeth **facing** the shaft from the end with the through hole and position the gear aligning the holes. Press the 2x12mm Pin through and secure with one 3x4mm Set Screw (**Tip 1**) using threadlock. Slide the Spacer Tube onto the shaft and position against the gear.

